

1-800-899-0553 assuredautomation.com

WM Series


Use & Care Manual

1. INSTALLATION

- 1. Thoroughly flush the service line upstream of the meter to remove dirt and debris.
- **2.** Set the meter inline. Cold water meters can be either vertically or horizontally installed. Hot water meters must be installed horizontally with the register facing upwards.
- **3.** Make sure the water flow follows the arrow cast on the meter body.
- **4.** Slowly open any upstream valves to prevent damage to the meter.

2. INSTALLATION DIAGRAM

No pipe dope or pipe tape here. -

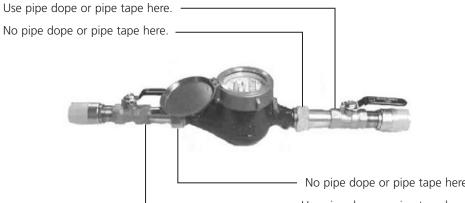


No pipe dope or pipe tape here. Use pipe dope or pipe tape here.

© Assured Automation 2009 WM2009

3. READING THE METER ODOMETER


5/8" to 1" Residential Meters

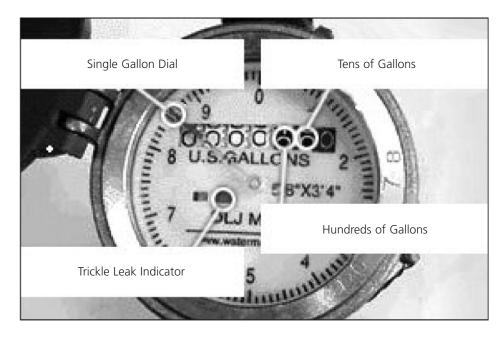

Example (maximum registration is 9,999,999 gallons):

Note: To convert gallons to cubic feet multiply the gallons reading by 0.1337 to get cubic feet (there are 7.48052 gallons per cubic foot).

1-1/2" to 2" Residential Meters, 1-1/2" to 3" Turbine Meters

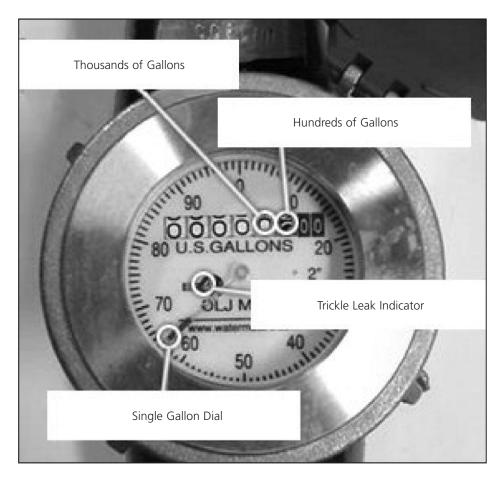

Example (maximum registration is 99,999,900 gallons):

1 2 3 4 5 6 00 = 12,345,600 gallons